

LFP <i>Tetenal Spectra Jet Medien</i>	Epson Stylus Pro 7880/9880	
Photo	Tinte	Mirage Basis Medium
HD Glossy Paper 260 g	Photo Black	Epson Premium Glossy Photo Paper 250
HD Satin Paper 260 g	Photo Black	Epson Premium Luster Photo Paper 260
<i>NEW Glossy Paper 272 g</i>	<i>Photo Black</i>	<i>Epson Premium Glossy Photo Paper 250</i>
<i>NEW Semi Matt Paper 240 g</i>	<i>Photo Black</i>	<i>Epson Premium Semimatte Photo Paper 260</i>
Premium Silk Paper 290 g	Photo Black	Epson Premium Semigloss Photo Paper
Glossy Poster Paper 190 g	Photo Black	Epson Premium Glossy Photo Paper 170
Semi Matt Poster Paper 190 g	Photo Black	Epson Premium Semiglossy Photo Paper 170
Matt Paper 165 g	Photo Black	Epson Enhanced Matte Paper (Photo Black)
Matt Paper 120 g	Photo Black	Epson Enhanced Matte Paper (Photo Black)
Fine Art	Tinte	Mirage Basis Medium
Premium Canvas 350 g	Photo Black	Epson PremierArt Waterres. Canvas for Epson Satin
White Canvas 340 g	Photo Black	Epson PremierArt Waterres. Canvas for Epson Satin
Satin Canvas 340 g	Photo Black	Epson Water Color Paper Radiant White (Photo Black)
Production Canvas 360 g	Photo Black	Epson PremierArt Waterres. Canvas for Epson Satin
Photo Carton 308 g	Photo Black	Epson Archival Matte Paper (Photo Black)
<i>Premium Lustre Paper 310 g</i>	<i>Photo Black</i>	<i>Epson Premium Luster Photo Paper 260</i>
Spezial	Tinte	Mirage Basis Medium
Easy Tack Film 220 g	Photo Black	Epson Enhanced Matte Paper (Photo Black)
Wallpaper 170 g	Photo Black	Epson Enhanced Matte Paper (Photo Black)
Backlit Film 210 µm	Photo Black	Epson Ultra Smoot Fine Art Paper (Photo Black)
Banner Blockout 500 g	Photo Black	Epson Photo Quality Inkjet Paper (Photo Black)
Blue Back 130 g	Photo Black	Epson Photo Quality Inkjet Paper (Photo Black)
Deko Print 80 g	Photo Black	Epson Ultra Smoot Fine Art Paper (Photo Black)
Flag 110 g	Photo Black	Epson Enhanced Matte Paper (Photo Black)
RollUp Film 180 µm	Photo Black	Epson Photo Quality Inkjet Paper (Photo Black)
Textil Banner 120 g	Photo Black	Epson Ultra Smoot Fine Art Paper (Photo Black)
Vinyl 100 µm	Photo Black	Epson Photo Quality Inkjet Paper (Photo Black)

Information:

Um nicht empfohlene Medientypen freizuschalten wählen Sie bitte in Mirage:

"Einstellungen", den Reiter "Erweitert" und setzen bei "Nicht empfohlene Medientypen freischalten" einen Haken.

26.06.2015